

Function Setting on Handset

Function	Contents	Selection	Factory Presetting	Remarks	
1. Phone Book	15 numbers in memory / Maximum 20 Digits for each number			15 numbers = the last 5 dialed numbers + 10 stored numbers	
2. Program CO		For programming data into base only		If you change the dial type, channel group or security code on handset, you have to re-program the base.	
3. Dial mode	(1) Dial Type	a. DTMF 050~200ms b. Pulse 1:2 10ps/1:2 20ps 2:3 10ps/2:3 20ps	a.100ms b.1:2 10ps (pps)	Please make setting according to your local system.	
	(2) Pause TM (time)	T=0500~8000ms	T(time) =3000ms	Please make setting according to your local system.	
	(3) Flash TM (time)	T=100~990ms	T(time) =100ms	Please make setting according to your local system.	
4. Setting	(1) Channel Group	0~8, 0=Full Channels	Random or Group 1	Base & handset can link only when they are within the same channel group.	
	(2) Call Barr (Control)	Inactive/Active (### or All)	Inactive (no control)	This is a function to restrict outgoing call. There are the following situations under "active" mode: 1. --- = no restriction 2. 000= all numbers are restricted. 3. 1 digit or 2 digits or 3 digits can be restricted as you like.	
	(3) Security Code	Security Code (##### = 6 digits)	Random or 123456	Base & Handset can link only when they have same security code.	
	(4) Password	Password (#### = 4 digits)	1234	Don't forget your password.	
	(5) Setup	a. Handset No. 10~99		Handset#=10	
		b. Password (Active/Inactive)		Inactive	If you set password under "active", it's necessary to enter your password when you want to go into the functions of setting.
		c. Voice Scramble (Active/Inactive)		Inactive	Under "active", scramble function will always exist.
		d. 40 or 80 CH.		80 channels	40 or 80 channels for select.
		e. Preferred responding Co. (Line) No. 1~9		CO#=1	The maximum quantity of base is 9 pcs. If you have only 1 base and you change the presetting to CO#2, then you have to make same change on base, too.
	(6) Talking Time	00~99 minutes, 00=Free	60 minutes	Control for outgoing call only.	
5. Select	(1) Saving Mode	Active (key lock)/Inactive	Inactive	Under "active", the wording showed on LCD display LCD display will disappear after 20 sec. And all keys will be locked. Any call comes in or pressing OK key will wake up again.	
	(2) ID exchange	Active/Inactive	Inactive	Under "active" mode, this function will be done once every 40 seconds.	
	(3) Out Range Beep	Active/Inactive	Inactive	Inactive: No signal warning beep.	
	(4) Answer Mode	a. Ring Type 1~3		Type=1	
		b. Ring Volume High/Low/Off		Vol=High	Off = No ring when call comes in.
		c. Hands-free (Active/Inactive)		Inactive	Under "active", when the call comes in, you can answer by hands-free after one ring only.
		d. answer key - OK or ALL		All = Any key Answer	Press any key to answer the call.
		e. Auto on line (Active/Inactive)		Inactive	Under "active", you can answer the call by only picking up the handset without pressing any key when the handset is in charging.
		f. Vibrator (Active/Inactive)		Inactive	
	(5) Power Level	High/Low/Auto	High	Auto = make adjustment depending on signal strength	
(6) Battery low alert	Active/Inactive	Active	Active: Low battery warning beep.		
(7) Key Click	High/Low/Off	Low	Off = silent		
(8) Back light	Active/Inactive	Active	Active = light keypad		